


User's guide

GT125

Web Gateway

Your GT125 Web Gateway

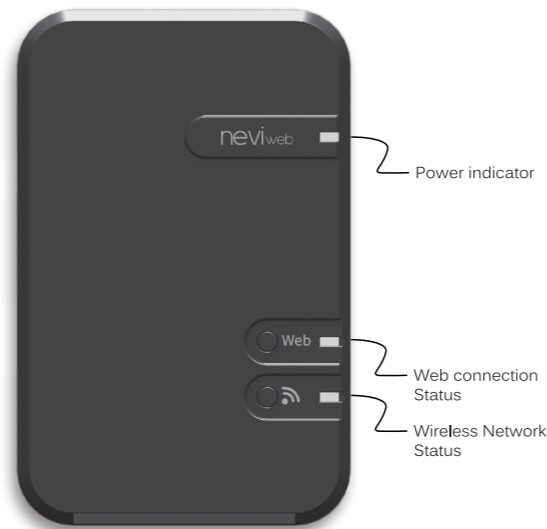

Web connection Status:

Green = The gateway is connected to the "neviweb" server

Wireless Network Status:

Amber = Searching for a network
Flashes green = Ready to add a new device
Green = The network is operational
Red = Refer to our website to troubleshoot the unit

Install your gateway

Connect your GT125 to your internet router using the provided Ethernet cable and connect the power adapter.

When connected, the gateway will automatically connect to the "neviweb" server.



The best diffusion pattern for the internal antenna is reached when the GT125 is installed vertically as shown above.

Link your network to "neviweb"

Go to www.neviweb.com to add your network.

If it's your first visit:

- Select **Register** to create your account.
- Enter the requested information, then press **Save**. An e-mail will be sent to you to activate your account.
- Add your network to your account by registering the gateway.

If you already have an account:

- Enter your e-mail and your password then press **Sign in**.
- Press on "my account", located at the upper right corner then select "add a network".

Note: To register your gateway, you will be asked to enter the ID number located on the back of your gateway.



Once completed, for security reasons, you will have to confirm the operation by pressing the "Web" button on your gateway.



Link your "neviweb" products to your gateway

To create your wireless network, refer to your "neviweb" compatible product's user's guide.

Transmitter Module IC: 7693A-89XAM9A / FCC ID: OA3MRF89XAM9A

This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device does not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3-year limited warranty

SINOPÉ TECHNOLOGIES INC. warrants the components of their products against defects in material and workmanship for a 3 year period from the date of purchase, under normal use and service, when proof of purchase of such is provided to the manufacturer. This warranty does not cover any transportation costs that may be incurred by the consumer. Nor does it cover a product subjected to misuse or accidental damage. The obligation of Sinopé Technologies Inc., under the terms of this warranty, will be to supply a new unit and this releases the manufacturer from paying the installation costs or other secondary charges linked to replacing the unit or the components.

For more information, visit our website at:
www.sinopetech.com

660-0125-0000-B