 


sinopé

**GT130**

Guide d'installation

Passerelle

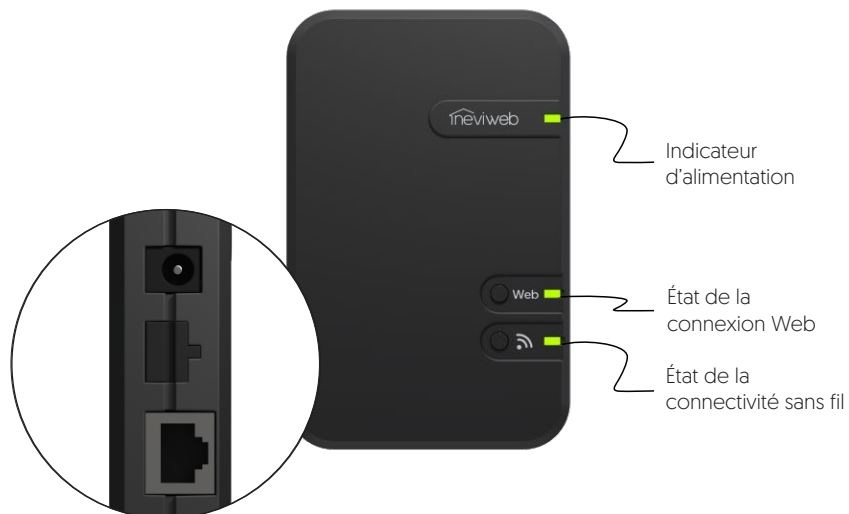

**État de la connexion Web**

Verte	La passerelle est connectée à Internet
Éteinte	Aucune connexion à Internet

**État de la connectivité sans fil**


Clignote verte	Prêt pour ajouter de nouveaux appareils
Verte	Le réseau est opérationnel
Rouge	Consulter le site Web pour faire le dépannage de l'unité
Éteinte	État initial

**zigbee 3.0**

**Installer votre passerelle**

Branchez la passerelle à votre routeur Internet à l'aide du câble Ethernet, puis branchez l'adaptateur d'alimentation.

 \* L'antenne interne de la passerelle diffuse de façon optimale lorsque cette dernière est installée en position verticale.

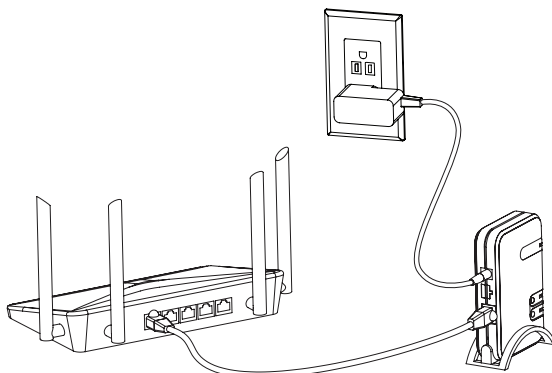

**Enregistrer votre passerelle**

1. Téléchargez l'application Neviweb pour iOS ou Android pour créer un compte et ajouter votre appareil.



**Obtenir l'appli**



2. Appuyez sur , puis sélectionnez « Ajouter un appareil ».

3. Suivez les étapes de l'assistant d'installation.

Module transmetteur  
 IC: 22394-ZBM1501/FCC ID: 2AK2T-ZBM1501  
 IC: 21098-ESPWROOM32/FCC ID: 2AC7Z-ESPWROOM32  
 Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne produit pas de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**Garantie limitée de 3 ans**

 
SINOPÉ TECHNOLOGIES INC. garantit les composantes de ses produits, contre les vices et les défauts de fabrication en fonction d'une utilisation et d'entretiens normaux, et ce, pour une période de 3 ans à partir de la date d'achat et sur présentation d'une facture attestant cette date. La garantie ne prévoit pas le remboursement des frais de transport encourus par le consommateur et ne s'applique pas à un produit qui aurait été mal installé, mal utilisé ou accidentellement endommagé. La responsabilité de SINOPÉ TECHNOLOGIES INC. se limite uniquement au remplacement du produit [appareil] et ne comprend d'aucune façon le coût de branchement ou de la pose de l'appareil ou pièces de remplacement.

sinopé

# GT130

## Installation Guide

Gateway

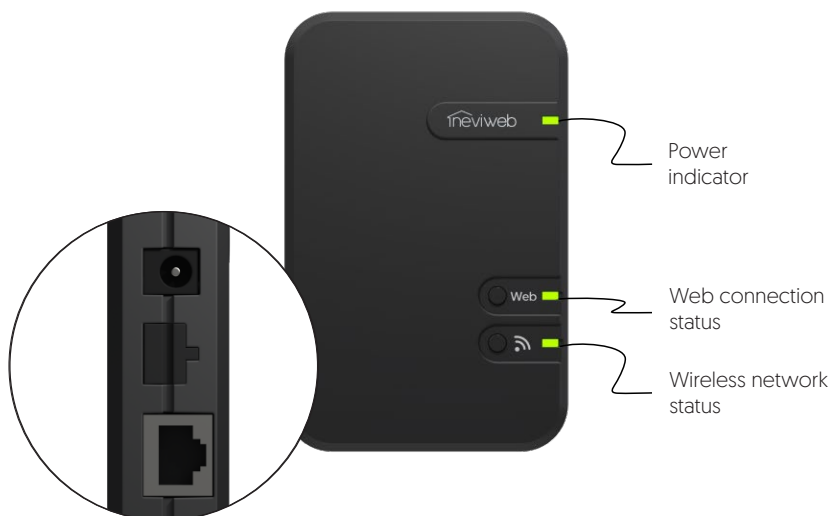

### Web connection status

Green	The gateway is connected to the Internet
Off	No Internet connection

### Wireless network status


Flashes green	Ready to add a new device
Green	The network is operational
Red	Refer to website to troubleshoot the unit
Off	Initial state

zigbee 3.0

### Install your gateway

Connect the GT130 Gateway to your Internet router using the Ethernet cable, then plug in the power cable.

 \* The internal antenna of the GT130 works better when the device is positioned vertically.

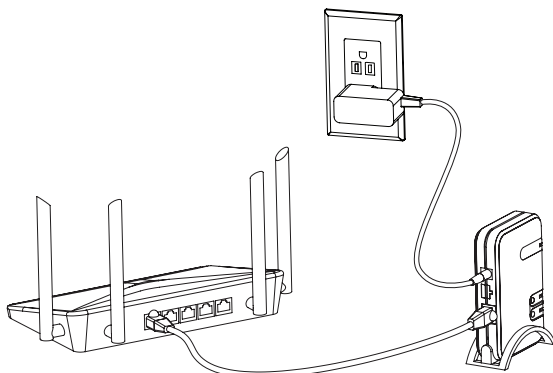

### Register your gateway

1. Download the Neviweb app for iOS or Android to create an account and add your device.



#### Get the app



2. Tap the ☰, then select "Add Device".

3. Follow the steps of the installation wizard.

Transmitter Module  
IC :22394-ZBM1501/FCC ID:2AK2T-ZBM1501  
IC :21098-ESPWROOM32/FCC ID:2AC7Z-ESPWROOM32

This device complies with Industry Canada license exempt RSS standard[s]. Operation is subject to the following two conditions:

[1] this device does not cause interference, and [2] this device must accept any interference, including interference that may cause undesired operation of the device. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### 3-year limited warranty

SINOPE TECHNOLOGIES INC. warrants the components of their products against defects in material and workmanship for a 3-year period from the date of purchase, under normal use and service, when proof of purchase of such is provided to the manufacturer. This warranty does not cover any transportation costs that may be incurred by the consumer. Nor does it cover a product that has been improperly installed, misused or accidentally damaged. The obligation of SINOPE TECHNOLOGIES INC., under the terms of this warranty, will be to supply a new unit and this releases the manufacturer from paying the installation costs or other secondary charges linked to replacing the unit or the components.