
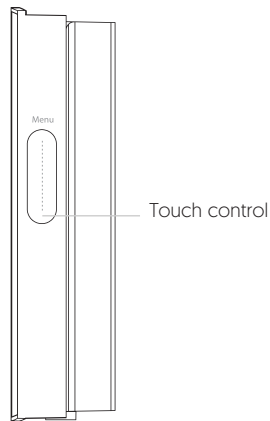


sinopé

TH1134ZB/HC

Installation Guide

Smart Line Voltage Thermostat

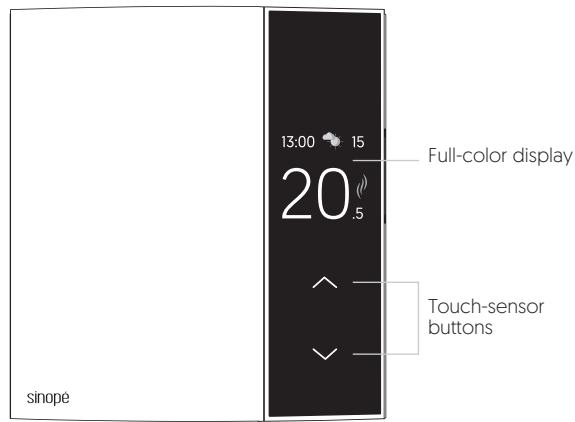

zigbee 3.0

Operating voltage: 120 / 208 / 240 Vac, 60 Hz

TH1134ZB/HC Thermostat**Maximum load:**

16.7 A / 2000 W @ 120 Vac

16.7 A / 4000 W @ 240 Vac

Resistive load only.

Minimum load:

1.25 A / 300 W @ 240 Vca

1.25 A / 150 W @ 120 Vca

Heating setpoint range: 41°F to 86°F [5°C to 30°C]**Display range:** 32°F to 99°F [0°C to 50°C]**Storage:** -4°F to 122°F [-20°C to 50°C]**Operation:** 32°F to 122°F [0°C to 50°C]**Resolution:** ± 0.5°C [± 1°F]**Protocol:** Zigbee 3.0**Frequency:** 2.4 GHz**Transmission power:** +20 dBm**Receiver sensitivity:** -108 dBm**Compatible with an electric heating system such as:**

- Baseboard heater [short cycle]
- Convector [short cycle]
- Fan-forced convector [long cycle]
- Radiant ceiling heating


Warnings

The installation of this thermostat must be performed by a certified electrician and comply with the national and local electrical codes and regulations.


Special CO/ ALR solderless connectors must be used when connecting with aluminum conductors.

INSTALL YOUR THERMOSTAT

- 1** Make sure that the breakers for your heating system are off at the main electrical panel.

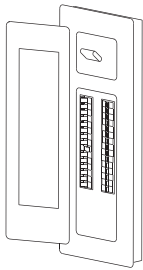


- 2** Unlock and lift the thermostat cover.

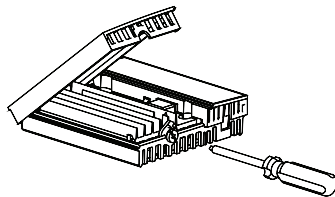


- 3** Use the connectors provided to connect the thermostat wires to the wires in the electrical box. Use the screws to secure the thermostat to the electrical box.

Three-wire installation

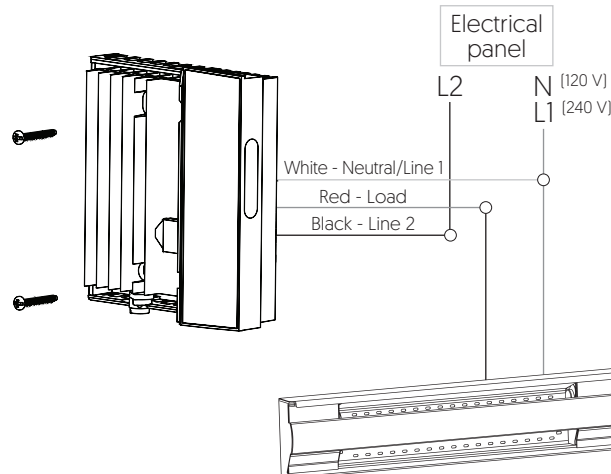


Make sure to firmly tighten the wire connectors for a secure connection. A loose connection can be a fire hazard.


To install wire connectors, you must:



- 4** Replace the cover and lock.

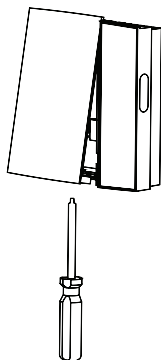

- 5** Power up the thermostat.

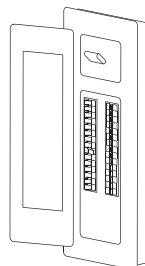

- 1 Insert the two wires into the wire nut so that their copper ends are parallel.
- 2 Turn the wire connector clockwise until there is strong tension.
- 3 Pull on the threads to make sure they are secure, leaving no gaps between them. * If the threads seem to come loose, repeat the process.

* Improperly installed electrical wires could burn the wire connectors.

ADD YOUR THERMOSTAT TO THE GT130 GATEWAY AND NEVIWEB

- 1 If you do not have an account yet, download the Neviweb app for iOS or Android to create an account and add your device.



Get the app



- 2 Tap , then select "Add Device".
- 3 Follow the steps of the installation wizard.

CONNECT YOUR THERMOSTAT TO THE GT130 GATEWAY OR A COMPATIBLE ZIGBEE SYSTEM

- 1 Initiate the connectivity session by pressing the RF signal button on the GT130 gateway. The indicator light will start flashing.

Compatible Zigbee gateway: refer to the installation guide for the latter.



- 2 Connect your thermostat to the network by pressing briefly and simultaneously on the and buttons.


The thermostat will start searching for a network to join.

Once the connection is complete, a connexion confirmation will appear on the screen.

"Failure" will appear on the display if the connection fails. Refer to our Website to troubleshoot the unit.



- 3 Connect all your devices the same way, by going to the next closest device.

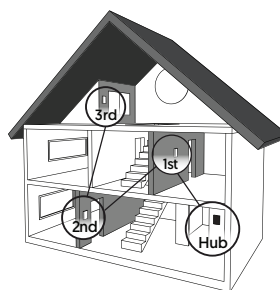

- 4 When all your devices are connected, close the connectivity session of your GT130 gateway or your compatible Zigbee gateway.




DISCONNECT YOUR THERMOSTAT FROM THE GT130 GATEWAY OR A COMPATIBLE ZIGBEE SYSTEM

- 1 To disconnect your thermostat from the GT130 gateway or a compatible Zigbee hub, press the button for 10 seconds to access the "Diagnostics" menu.



- 3 Swipe down on the touch control until "Factory reset" appears on the screen.



Swipe down


- 3 Then simultaneously hold the and buttons for 10 seconds.



CONFIGURATION MENU

To customize the settings in the configuration menu, you must:

- 1 Press the button for 5 seconds to access the configuration menu.
- 2 Swipe down on the touch control until the desired parameter appears on the screen.
- 3 Toggle between the different settings by using the and buttons. Wait for 4 seconds for your selection to be confirmed or confirm it automatically by down to another menu screen.

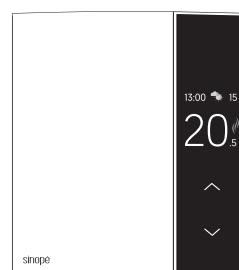

Transmitter Module IC: IC: 5123A-GM210P / FCC ID: QOQGM210P

This device complies with Industry Canada license exempt RSS standard[s]. Operation is subject to the following two conditions:
[1] this device does not cause interference, and [2] this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Configuration menu

#	Parameter	Settings	Default
1	Language choice	French English	English
2	Cycle length	15 sec 15 min	15 sec
3	Temperature unit	Celcius Fahrenheit	Celcius

Neviweb® is a registered trademark of Sinopé Technologies Inc. in Canada and the United States. Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc.

3-year limited warranty

SINOPÉ TECHNOLOGIES INC. warrants the components of their products against defects in material and workmanship for a 3 year period from the date of purchase, under normal use and service, when proof of purchase of such is provided to the manufacturer. This warranty does not cover any transportation costs that may be incurred by the consumer. Nor does it cover a product that has been improperly installed, misused or accidentally damaged. The obligation of Sinopé Technologies Inc., under the terms of this warranty, will be to supply a new unit and this releases the manufacturer from paying the installation costs or other secondary charges linked to replacing the unit or the components.